



Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the side garnish(A) after loosening the mounting clips.
(Refer to the Body group - "Crash pad")

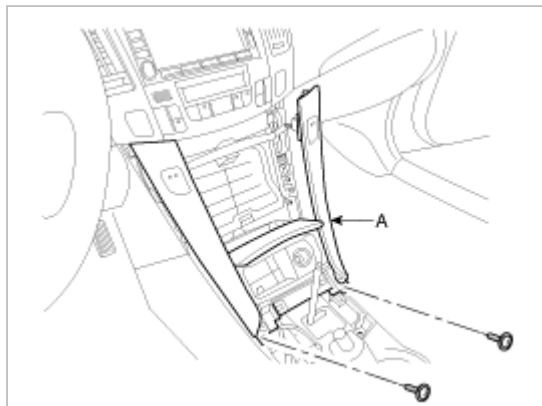

3. Remove the switch(A) after removing the seat heater connector from the side garnish.
 1. GND
 2. IND High
 3. ILL(-)
 4. ILL(+)
 5. Switch signal
 6. IND Low

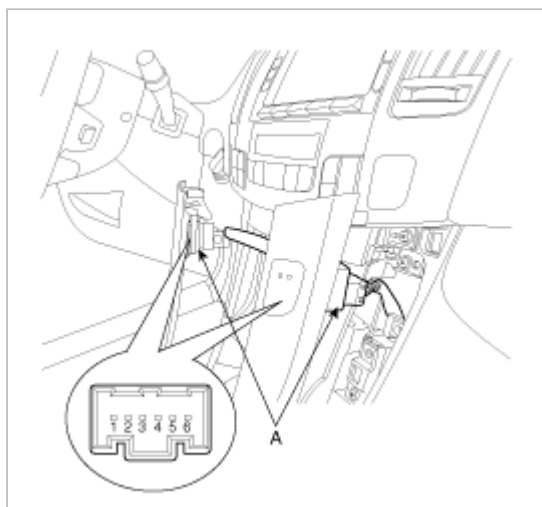

4. Check that continuity exists between the terminals.

Terminal Position	3	4	5	6	2	1
ON(Low)	○	○	○	○	○	○
ON(High)	○	○	○	○	○	○
OFF	○	○	○	○	○	○

Continuity paths shown in the diagram:

- Terminal 3 to 4: ILL
- Terminal 5 to 6: IND.
- Terminal 6 to 2: IND.
- Terminal 2 to 1: IND.