

## WIRING DIAGRAM

The unit is designed for 12V DC, negative connect to ground. Make sure our vehicle is DC 12V, negative ground electrical system before installation. The sub woofer and automatically antenna of this unit have separate power supply.

Be sure to connect the color coded wires correctly according to diagram. Incorrect connections can cause the unit malfunction, or damage the vehicle electronics system.

Be sure to connect the speaker(-) to speaker(-) terminal. Never connect the left and right channel speaker cables to each other speakers, or connect to vehicle body.

To avoid the unit damage by over heat, please do not block vents or heat radiating panel

## System connection diagram

