


REAR FOG LAMPS

INSPECTION E633BED6


REAR FOG LAMP SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the lower crash pad switch (A) from the side crash pad cover (B) by using the scraper (C) and then disconnect the connectors.

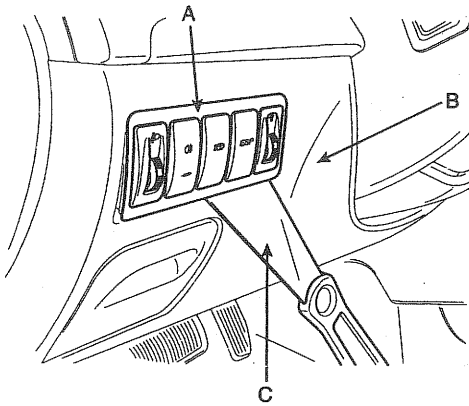

ETRF497A

3. Remove the rear fog lamp switch (A) from lower crash pad switch.

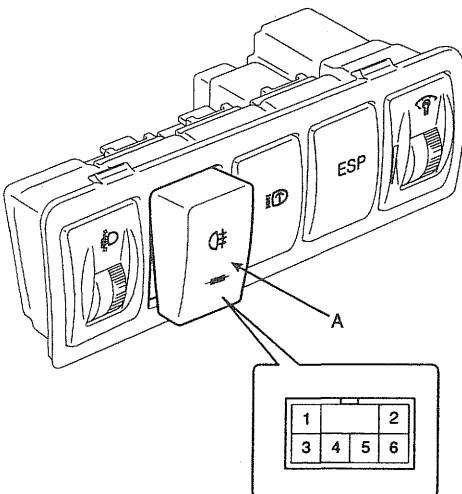

ETRF497B

4. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	2	5	1	4	3
ON					
OFF					

LTGE441B