

**Steering wheel set :**

1. To identify the original car steering wheel control plug, and connect the machine side control line Block
2. Pink is positive , black for the negative
3. Click the main menu settings, set the world into the machine, and then select the square set into the steering wheel settings control interface + click on the "Default" button to select your car model.  
USER series FORO series TOYOTA series MAZDA series CRVseries MIT series BYD series TIIDA Series HYUNDAI series. NO USE as setting specific models to be equipped with a dedicated connection line of the company befor<sup>e</sup>.
4. USER series for the learning side control settings.  
Enter USER set mode, hold down the button on the steering wheel tightly, then click the corresponding button to select the machine, set the other keys in this way. After setup is complete, set to be completed

